

ME SERIES

1/2 through 1-1/2 HP
Effluent Pumps

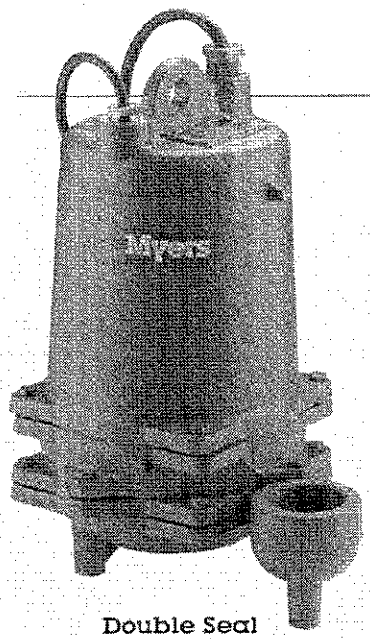

Double Seal

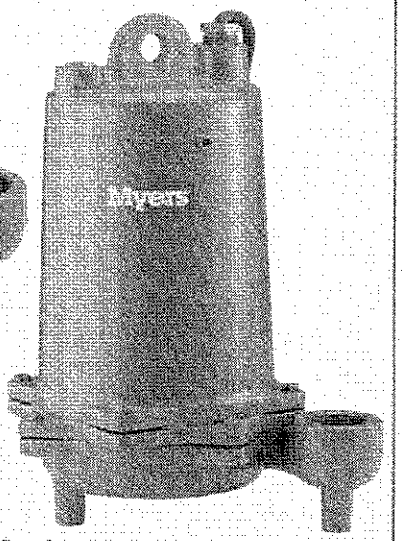

Single Seal

THE MYERS ME SERIES EFFLUENT PUMPS ARE DESIGNED SPECIFICALLY FOR TODAY'S EFFLUENT PRESSURE DISTRIBUTION MOUNDS, TRENCHES AND HIGH FLOW DRAINAGE APPLICATIONS. The ME Series effluent pumps with their efficient two vane, enclosed impellers, provide the ideal performance for optimum dosing. ME Series pumps are constructed of only corrosion resistant materials like cast iron, stainless steel and thermoplastics to assure that they will perform for years to come in the harsh effluent environment and drainage applications. For more information, call your Myers distributor today or the Myers Ashland, Ohio sales office at 419/289-1144.

ADVANTAGES BY DESIGN

IDEAL FOR USE IN MOUND AND TRENCH PRESSURE DISTRIBUTION SYSTEMS

- High efficiency, two vane, enclosed impeller provides ideal performance for most efficient dosing.
- Impeller passes full ¾ inch solids.
- Enclosed impeller design eliminates possibility of jamming or corrosion between impeller and volute.

DURABLE MOTOR WILL DELIVER MANY YEARS OF RELIABLE SERVICE

- Oil-filled motor for maximum heat dissipation and constant bearing lubrication.
- High torque, permanent split capacitor (PSC), single phase motors. No starting switches or relays to wear out.
- Optional seal leak probe warns of seal leak condition. (Dual seal motors only.) Helps prevent costly motor damage.
- Motors have on winding current and temperature sensitive overload. (Single phase only.)

THE ME SERIES EFFLUENT PUMPS ARE DESIGNED FOR YEARS OF MAINTENANCE FREE OPERATION

- Volute seal ring is replaceable. Restores pump to original performance if wear should occur.
- Motor is held in place by 4 screws. Easily removed if service is ever needed.

PRODUCT CAPAILITIES

Capacities To	120 GPM	454 LPM
Heads To	95 ft.	28.9 m
Max. Spherical Solids	¾ in.	19 mm
Liquids Handling	domestic effluent & drain water	
Intermittent Liquid Temp.	up to 140° F	up to 60° C
Motor Electrical Data	1/2 HP 115 volts, 1 ph 1/2 to 1-1/2 HP 230 volts, 1 ph 208, 230, 460, 575 volts, 3 ph oil-filled, permanent split capacitor type, 1 ph, 3450 rpm, 60 Hz	
Motor Insulation	Class B (130° C)	
Third Party Approvals	UL, CSA	
Acceptable pH Range	6-9	
Specific Gravity	9-1.1	
Viscosity	28-35 SSU	
Discharge, NPT	2 in.	50.8 mm
Min. Sump Dia. Simplex	24 in.	61 cm
Duplex	36 in.	91.4 cm

Construction Materials	
Motor Housing, Volute	cast iron, Class 30, ASTM A48-76
Enclosed Two Vane Impeller Standard	engineered thermoplastic
Optional	bronze
Impeller Wear Ring	304 SST
Volute Sealing Ring	Buna-N
Shaft	416 SST
Power Cord 1/2 HP 1 Ph	20 ft. 16/3 SJOW/SJOW-A
3/4 - 1-1/2 HP 1 Ph	20 ft. 14/3 SJOW/SJOW-A
All 3 Ph	20 ft. 14/4 SOW/SOW-A
Shaft Seals Standard	single carbon & ceramic
Optional	tandem carbon & ceramic
Opt. Lower	tungsten carbide
Fasteners	300 Series SST

WHERE INNOVATION MEETS TRADITION

ISO 9001 Certified Company

Myers
PENTAIR PUMP GROUP

ME SERIES

1/2 through 1-1/2 HP
Effluent Pumps


POWER CORD
Jacket sealed with compression fittings. Individual wires potted with epoxy to prevent wicking in case of cord damage.

MOTOR HOUSING
Cast iron for efficient heat transfer and corrosion resistance.

BEARINGS
Upper and lower ball support rotor. Take radial and thrust loads.


MOTOR
1/2, 3/4, 1 and 1-1/2 HP single or three phase. 60 Hz, 3450 RPM. Single phase PSC motors have built-in on winding overload protection, oil-cooled and lubricated.

HIGH EFFICIENCY CAST IRON VOLUTE
Corrosion resistant. Passes ¾" spherical solids. 2" NPT discharge.

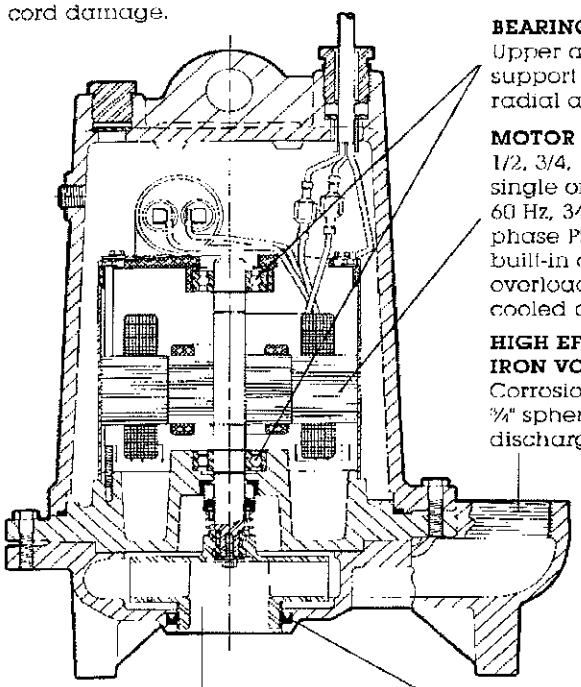

ENCLOSED TWO VANE IMPELLER
high efficiency. Passes ¾" spherical solids with stainless steel wear ring. Optional bronze construction available.


VOLUTE/IMPELLER SEAL RING
Maintains high efficiency and reduces recirculation. Replaceable.

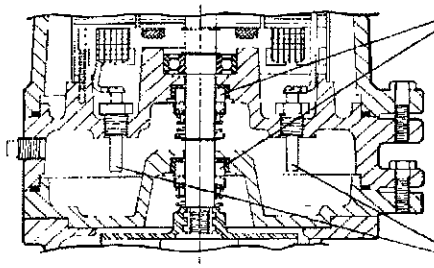


SHAFT SEAL(S)
Carbon and ceramic faces. Optional dual tandem seals. Extends motor life.

SEAL LEAK PROBES
Optional probes (dual seal only) detect water leakage in seal housing. Activates warning light.


DIMENSIONS

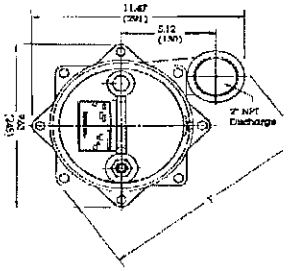

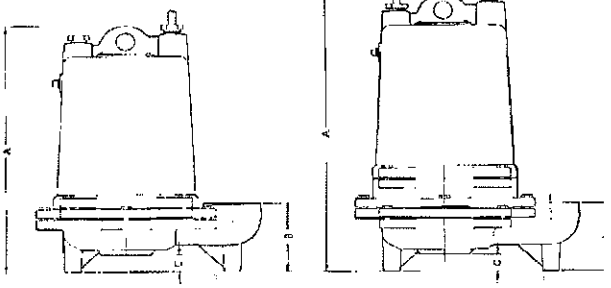

Model Series	Inches (millimeters) A	B	C	F
ME50S	16.8 (427)	4.09 (104)	1.03 (26)	12.13 (308)
ME50D	18.6 (472)	4.09 (104)	1.03 (26)	12.13 (308)
ME75S, ME100S, ME150S	16.8 (427)	4.0 (102)	1.06 (27)	12.5 (318)
ME75D, ME100D, ME150D	18.6 (472)	4.0 (102)	1.06 (27)	12.5 (318)

PERFORMANCE CURVE

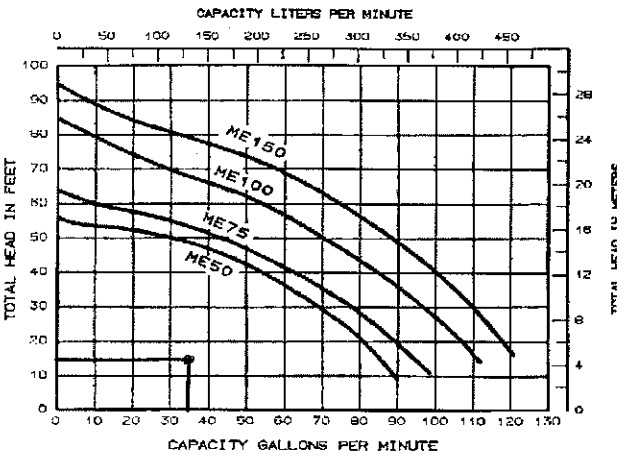

K3320 9/98
Printed in U.S.A.

PRINTED WITH SOY INK


Myers
PENTAIR PUMP GROUP

F. E. Myers, 1101 Myers Parkway, Ashland, Ohio 44805-1969
419/289-1144, FAX: 419/289-6658, www.femyers.com
Myers (Canada), 269 Trillium Drive, Kitchener, Ontario N2G 4W5
519/748-5470, FAX: 519/748-2553

MODEL 112 Control Panel


Single phase, simplex motor contactor control.

The Model 112 control panel provides a reliable means of controlling one 120, 208, or 240 VAC single-phase pump in pump chambers, sump pump basins, irrigation systems and lift stations. Two control switches activate a magnetic motor contactor to turn the pump on and off. If an alarm condition occurs, an additional alarm switch activates the audio/visual alarm system.

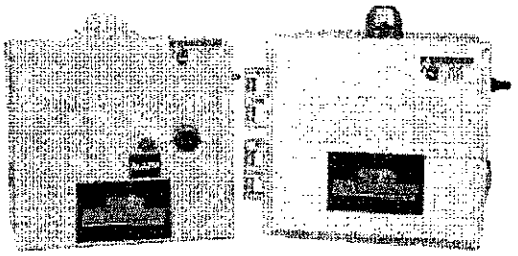

indoor *indoor/outdoor*

Model Shown
1121W914X

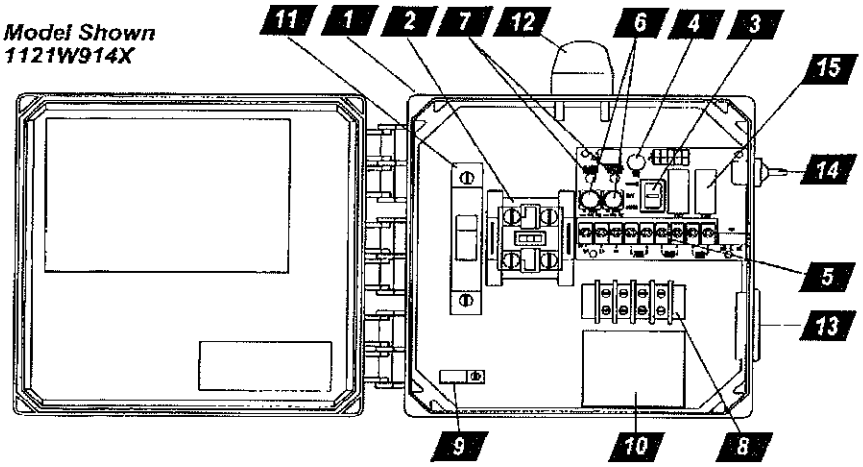

1. **Enclosure** measures 8 x 8 x 4 inches (20.32 X 20.32 X 10.16 cm). Choice of NEMA 1 (steel for indoor use), or NEMA 4X (ultraviolet stabilized thermoplastic with removable flanges for outdoor or indoor use).

   * Options selected may increase enclosure size and change component layout.
2. **Magnetic Motor Contactor** controls pump by switching hot electrical lines.
3. **HOA Switch** for manual pump control (mounted on circuit board).
4. **Green Pump Run Indicator Light** (mounted on circuit board).
5. **Float Switch Terminal Block** (mounted on circuit board).
6. **Alarm and Control Fuses** (mounted on circuit board).
7. **Alarm and Control Power Indicators** (mounted on circuit board).
8. **Pump Input Power and Pump Connection Terminal Block**
9. **Ground Lug**
10. **Terminal Block Installation Label**
11. **Circuit Breaker** (optional) provides pump disconnect and branch circuit protection.

STANDARD ALARM PACKAGE (other options available)

12. **Red Alarm Beacon** provides 360° visual check of alarm condition. **Note:** NEMA 1 style utilizes a door mounted indicator in lieu of a beacon.
13. **Alarm Horn** provides audio warning of alarm condition (83 to 85 decibel rating). **Note:** NEMA 1 style utilizes an internally mounted buzzer (83 to 85 decibel) in lieu of horn.
14. **Exterior Horn Test/Normal/Silence Switch** allows alarm horn to be silenced and testing of horn and light to ensure proper operation of alarm system.
15. **Horn Silence Relay** automatically resets alarm after alarm condition has been resolved (mounted on circuit board).

FEATURES

- Entire control system (panel and switches) is UL Listed to meet and/or exceed industry safety standards
- Dual safety certification for the United States and Canada
- Standard package includes three 20' Sensor Float® control switches
- Complete with step-by-step installation instructions
- Three-year limited warranty

c UL us
LISTED

SJE-Rhombus CONTROLS
SJ ELECTRO SYSTEMS, INC.
PO Box 1708, Detroit Lakes, MN 56502
1-888-DIAL-SJE 1-218-847-1317
1-218-847-4617 Fax
email: sje@sjerhombus.com
www.sjerhombus.com



MODEL 112

ALARM PACKAGE
0 = select options or no alarm package
1 = alarm package (includes test/normal/silence switch, fuse, red light, horn & float)

ENCLOSURE RATING
I = Indoor, NEMA 1 (metal)
W = Weatherproof, NEMA 4X (engineered thermoplastic)

STARTING DEVICE
1 = magnetic motor contactor 120/208/240V
9 = magnetic motor contactor 120V only

PUMP FULL LOAD AMPS
0 = 0-7 FLA
1 = 8-15 FLA
2 = 16-20 FLA
3 = 21-30 FLA

PUMP DISCONNECTS
0 = no pump disconnect
1 = pull-out with safety deadfront in a 10"x8" enclosure
4 = circuit breaker

FLOAT SWITCH APPLICATION
H or L = pump down or pump up
X = no floats

OPTIONS *Listed below*

★ Options selected may increase enclosure size and change component layout.

If additional features are required, call the factory for a quote on either a Pro-Line or Engineered Custom control panel system.

CODE	DESCRIPTION
1A	Red beacon only / no audio *must select 1E if floats included*
1C	Horn only / no visual *must select 1E if floats included*
1E	Alarm float
3A	Alarm flasher
★ 4A	Low level cutout *select option 4D if floats included*
★ 4B	Red low-level indicator & alarm *must select 4A also*
4D	Low-level float
6A	Auxiliary alarm contact, form C type
★ 8A	Elapsed time meter
★ 8C	Event (cycle) counter
10E	Lockable latch - NEMA 4X
10E	Lockable latch - NEMA 1
★10F	Lightning arrester
★10K	Anti-condensation heater

CODE	DESCRIPTION
11C	NEMA 1 alarm panel *must select option 6A*
11D	NEMA 4X alarm panel *must select option 6A*
15A	Control / alarm circuit breaker *Does not include the circuit board as in standard.*
16A	10' cord in lieu of 20'
16B	15' cord in lieu of 20'
16C	30' cord in lieu of 20'
16D	40' cord in lieu of 20'
17A	SJE SignalMaster® / mounting strap ●
17B	SJE SignalMaster® / externally weighted ●
17C	Sensor Float® / internally weighted ▲
17D	Sensor Float® / externally weighted ▲
17E	Sensor Float® Mini / pipe clamp ▲
17F	Sensor Float® Mini / externally weighted ▲
19X	Door mounted pump run indicator
21A	Pumpmaster® in lieu of on/off switches ●
21B	PumpMaster® Plus in lieu of on/off switches ●
21C	Super Single® in lieu of on/off switches ▲
21D	Double Float™ in lieu of on/off switches ▲

● Mechanically-activated ▲ Mercury-activated

SAMPLE


MODEL 112 | 1 | W | 9 | 1 | 4 | H | 3A 8A

Alarm Package
Enclosure Rating
Starting Device
Pump Full Load Amps
Pump Disconnect
Float Switch Application
Options: Alarm Flasher, Elapsed Time Meter

© SJE-Rhombus Printed in USA 01/00

SENSOR FLOAT® control switch

Mercury-activated, narrow-angle float switch designed to activate pump control panels and alarms.

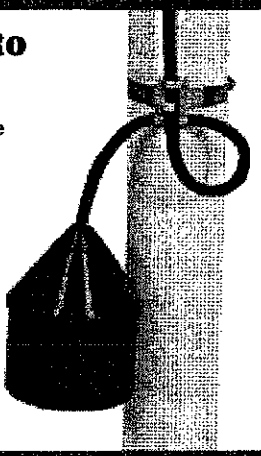

This narrow-angle sensing device is used to accurately monitor liquid levels in sewage and non-potable water applications. The Sensor Float® control switch is not sensitive to rotation and is suitable for use with intrinsically safe circuits. Contact SJE-Rhombus regarding specific intrinsically safe applications.

Normally Open Model (high level)
The control switch turns on (closes) when the float tips slightly **above** horizontal signaling a high level, and turns off (opens) when the float drops slightly below horizontal.

Normally Closed Model (low level)
The control switch turns on (closes) when the float drops slightly **below** horizontal signaling a low level, and turns off (opens) when the float tips slightly above horizontal.

FEATURES

- Suitable for use with intrinsically safe circuits.
- Not sensitive to rotation.
- Control differential of .5 inches (1 cm) above or below horizontal.
- UL Listed for use in non-potable water and sewage.
- CSA Certified.
- Three-year limited warranty.

LR54245 LISTED 83N2

Hydraulic

OPTIONS

This switch is available:

- for normally open (high level) applications or normally closed (low level) applications.
- in standard cable lengths of 10, 15, 20, or 30 feet and 3, 5, 6, or 10 meters.
- with three mounting options that allow for flexibility in installation:

  Mounting Clamp: for applications where the switch can be attached to a discharge pipe or similar mounting device.

  Internally Weighted: for applications where the switch can be suspended from above.

  Externally Weighted: for applications where the switch can be suspended from above.

SPECIFICATIONS

CABLE: flexible 18 gauge, 2 conductor (UL,CSA) SJOW, water-resistant (CPE) jacket

FLOAT: 3.38 inch diameter x 4.55 inch long (8.58 cm x 11.56 cm), high-impact, corrosion resistant, PVC housing for use in sewage and non-potable water up to 140°F (60°C)

MAXIMUM WATER DEPTH: 30 feet (9 meters), 13 psi

MERCURY TILT SWITCH: single pole, single throw, mercury-to-mercury contacts, hermetically sealed in a steel capsule and epoxy sealed in the float housing

ELECTRICAL: 5 amp, 120/230 VAC, 50/60 Hz

CONTROLS SJE-Rhombus
SJ ELECTRO SYSTEMS, INC.
PO Box 1708, Detroit Lakes, MN 56502
1-888-DIAL-SJE 1-218-847-1317
1-218-847-4617 Fax
email: sje@sjerhombus.com
www.sjerhombus.com

Sensor Float® control switch installation instructions

⚠WARNING ELECTRICAL SHOCK HAZARD
Disconnect power before installing or servicing this product. A qualified service person must install and service this product according to applicable electrical and plumbing codes.

⚠WARNING EXPLOSION OR FIRE HAZARD
Do not use this product with flammable liquids. Do not install in hazardous locations as defined by National Electrical Code, ANSI/NFPA 70.

Failure to follow these precautions could result in serious injury or death. Replace product immediately if switch cable becomes damaged or severed. Keep these instructions with warranty after installation. This product must be installed in accordance with National Electric Code, ANSI/NFPA 70 so as to prevent moisture from entering or accumulating within boxes, conduit bodies, fittings, float housing, or cable.

MOUNTING THE SWITCH

1. Place the cord into the clamp as shown in Figure B.
2. Locate clamp at desired activation level and secure the clamp to the discharge pipe as shown in Figures A and B. **Note:** Do not install cord under hose clamp.
3. Tighten the hose clamp using a screwdriver. Over tightening may result in damage to the plastic clamp. Make sure the float cable is not allowed to touch the excess hose clamp band during operation.
4. Bring cable leads back to control device and wire according to Figure C.
5. Check installation. Allow system to cycle to insure proper operation.

Note: All hose clamp components are made of 18-8 stainless steel material. See your SJE-Rhombus supplier for replacements.

Figure A


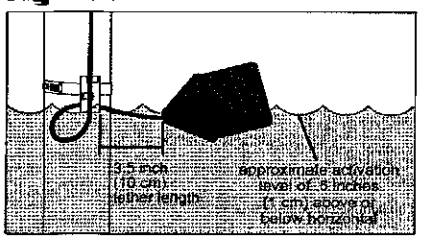


Figure B

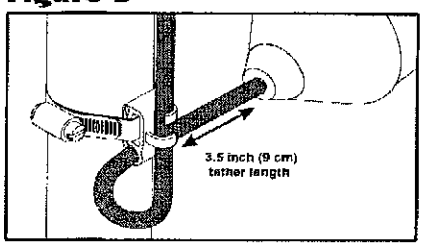

INTERNAL WEIGHT

1. Determine desired activation level.
2. Suspend switch 7 inches (18 cm) below desired activation level as shown in Figure D. Switch remains partially submerged during the "on" tipping action. Switch can be totally submerged and still continue to operate properly.
3. Wire cable leads directly into control device as shown in Figure C.
4. Check installation. Allow system to cycle to insure proper operation.

Figure C - Wiring Diagram


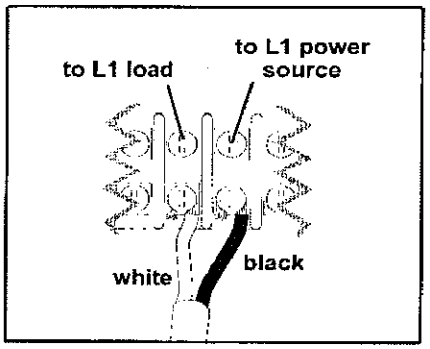


Figure D

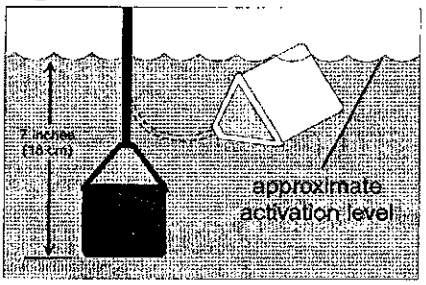


CABLE WEIGHT

1. Determine desired activation level.
2. Suspend switch and cable weight at desired activation level as shown in Figure E.
3. Wire cable leads directly into control device as shown in Figure C.
4. Check installation. Allow system to cycle to insure proper operation.

Cable weight is attached to switch cable at the factory. To adjust:

1. Release clip.
2. Adjust cable weight to desired position.
3. Lay switch cable in weight channel.
4. Align clip with weight channel and slide towards switch cable as shown in Figure E.
5. Snap clip snugly up to cable, moving clip to tightest possible position.

Figure E

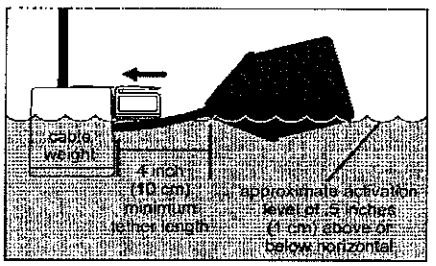


CONTROLS SJE-Rhombus SJ ELECTRO SYSTEMS, INC.
22650 County Highway 6 ■ P.O. Box 1708 ■ Detroit Lakes, Minnesota 56502 USA
1-888-DIAL-SJE (1-888-342-5753) ■ Phone: 218-847-1317 ■ Fax: 218-847-4617
E-mail: sje@sjerhombus.com

Instl. Instr. PN 1009646A
Cat. Page PN 1009509A

©SJE-Rhombus
Printed in USA 03/00

ELECTRIC BOX

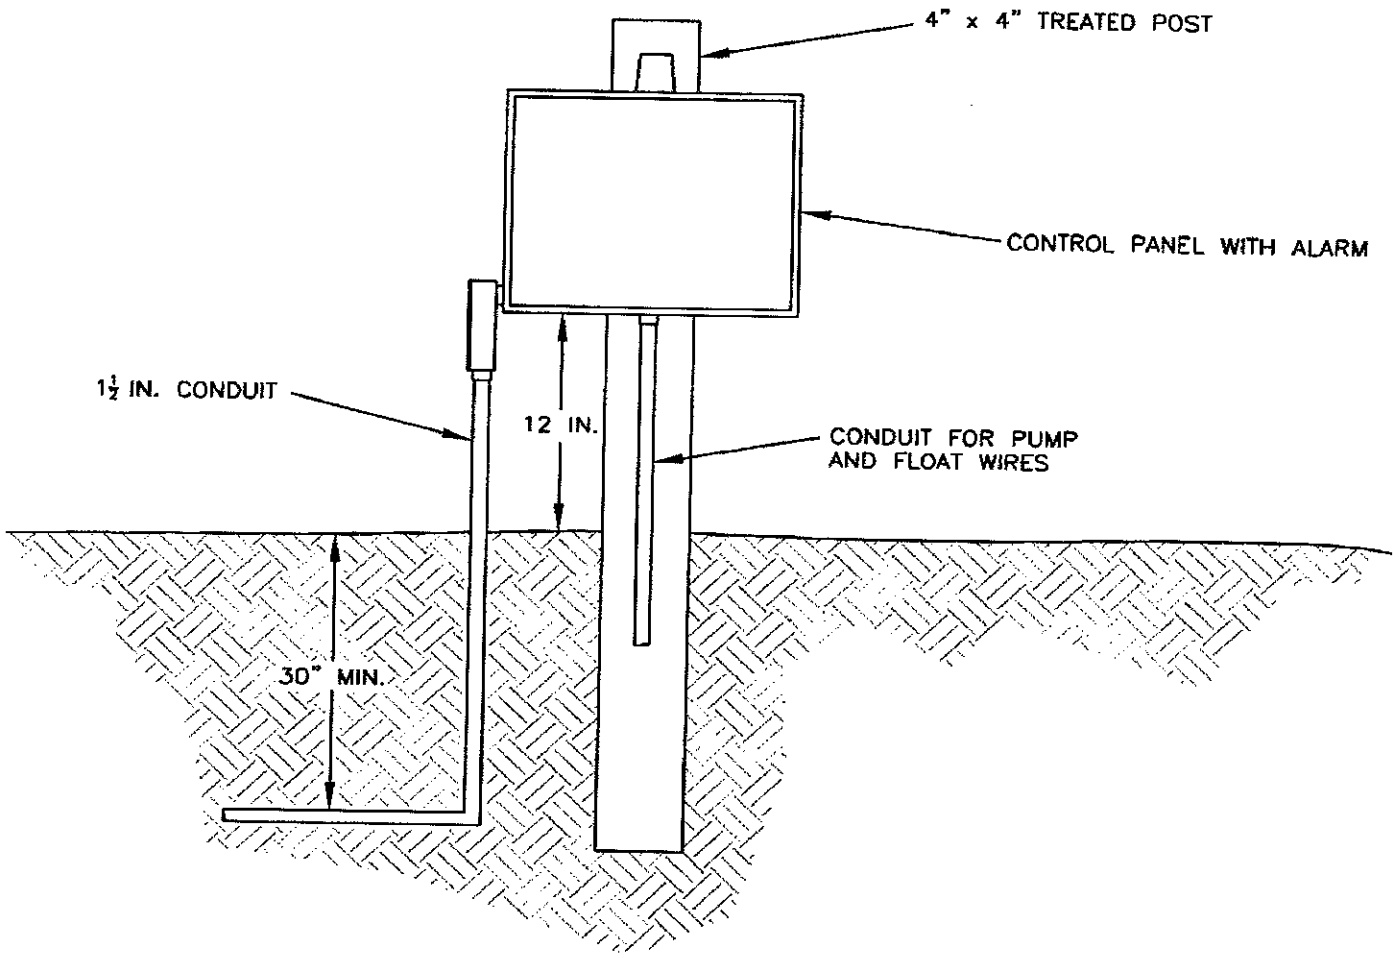

NOTES: ELECTRICAL SYSTEM COMPONENTS SHALL BE INSTALLED TO MEET OR EXCEED MINIMUM REQUIREMENTS SPECIFIED IN THE ELECTRICAL COME. ALL WIRING SHALL BE #12 MINIMUM, AND RATED FOR DIRECT BURY. PROVIDE GROUNDING AS REQUIRED, AND PROVIDE 30" MINIMUM BURY ON CABLES. PROVIDE ONE 20 AMP, DOUBLE POLE, 230 VOLT CIRCUIT BREAKER (FOR PUMP), AND ONE 20 AMP, SINGLE POLE, 115 VOLT CIRCUIT BREAKER (FOR ALARM) IN MAIN PANEL.