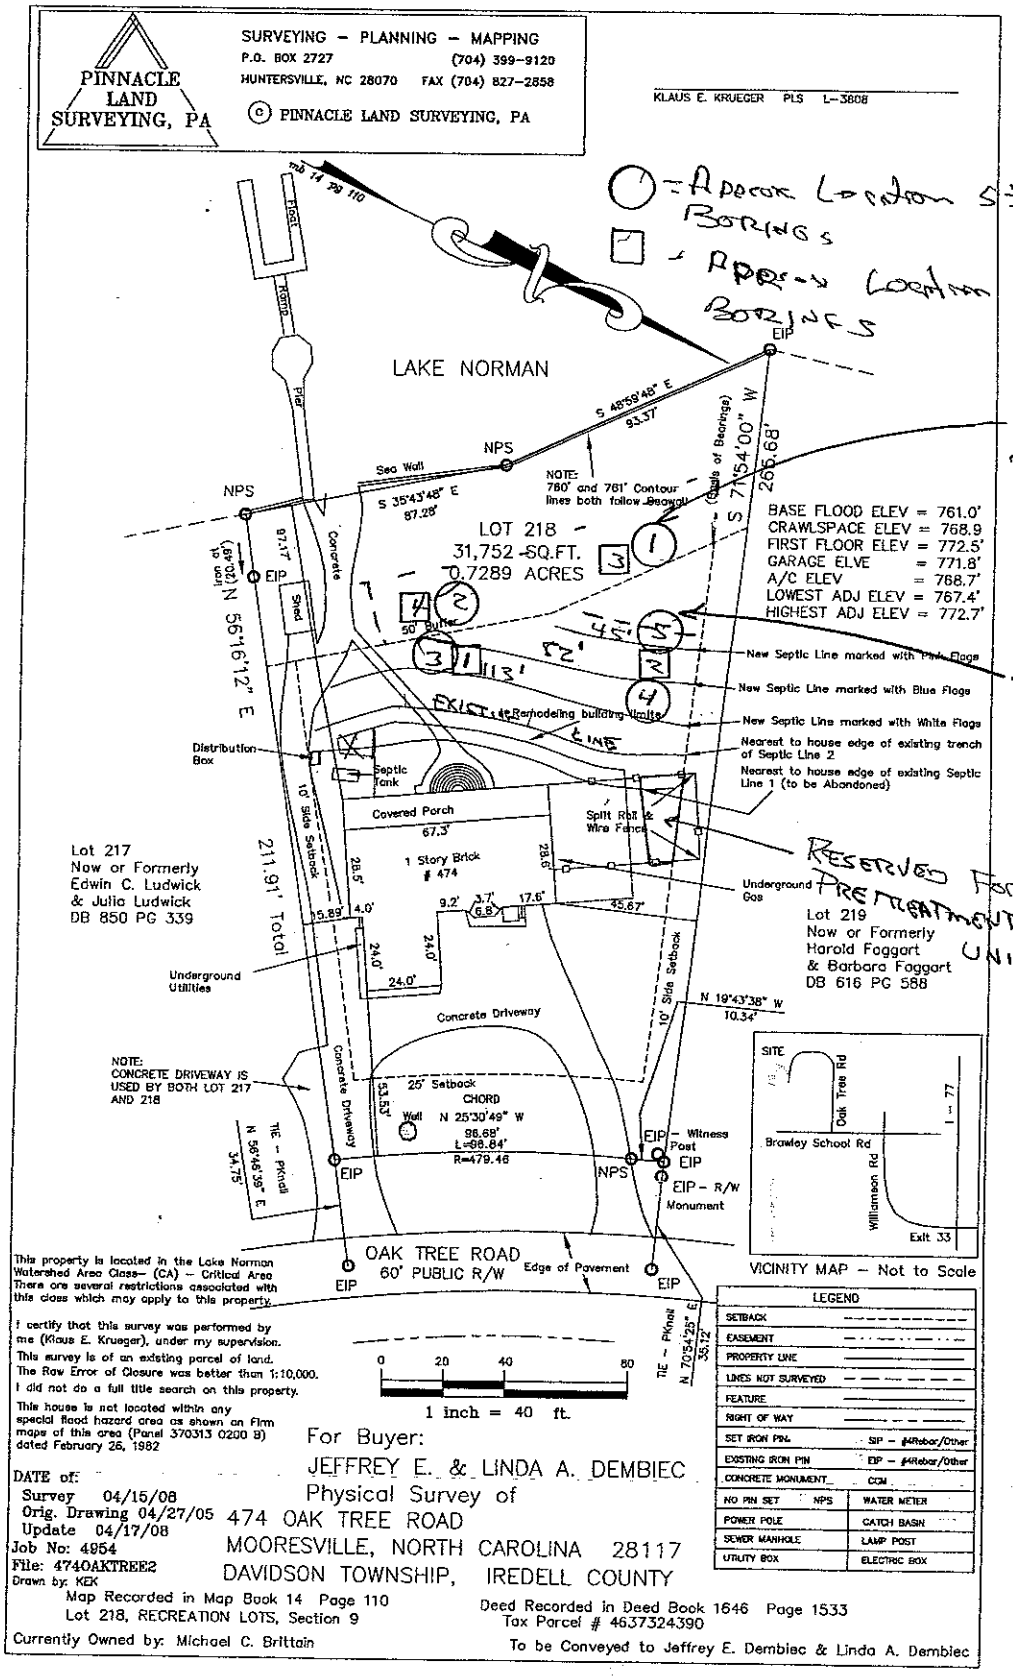


○ = Approx Location of Septic Borings

□ = Approx Location ICND Borings

~ 2200 ft² Repair

~ 400 ft² Repair

RESERVED FOR PRETREATMENT UNITS